## LTECH



## CV LED Wireless + DMX Driver


- Support RF 2.4GHz wireless signal and DMX wired connection.
- Can connect dimming, color temperature, RGB, RGBW, RGBWY lamps.
- Compatible with F series remote, RC4-RF-B remote and Q series remote.
- Compatible with EX series touch panel.
- Compatible with WiFi-106 / WiFi-108 gateway.

## F© (€ RoHS







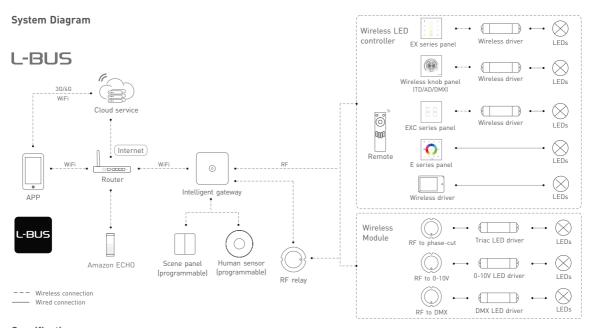


### **Specification**

Model	F4-DMX-5A	F5-DMX-4A
Dimming interface	DMX/RDM	
Wireless signal	RF 2.4GHz	
Input voltage	5~24Vdc	
Output voltage	5~24Vdc	
Current load	5A×4CH Max. 20A	4A×5CH/5A×4CH Max. 20A
Output power	(0~25W120W)×4CH Max. 480W	(0~20W96W)×5CH Max. 480W
Protection	Short circuit / Over current / Reverse connection protection	Short circuit / Over current / over-heat / Reverse connection protection
Working temperature	-30°C~55°C	
Product size	L175xW44xH30(mm)	
Package size	L178×W48×H33(mm)	
Weight(G.W.)	130g	

## **Product Size**

 Unit: mm










#### **Terminal Description**

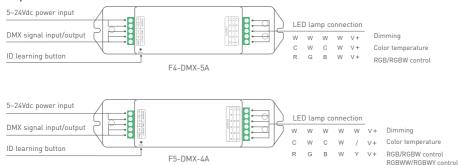

#### Match Code



flicker, please complete step 2 within 15 seconds.

# Step 1: Short press "ID learning button" on driver, the lamps ID learning (

#### Match code (power on method):


Step 1:

The driver power off .

Wireless + DMX driver

simultaneously, meanwhile the driver power on.



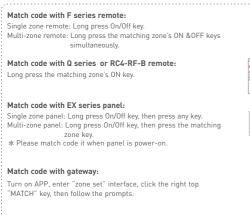

#### Step 2:

# Match code with F series remote: Single zone remote: Hold down On/Off key, meanwhile the driver power on. Multi-zone remote: Hold down the matching zone's On & Off keys

### Match code with Q series or RC4-RF-B remote:

Hold down the matching zone's ON key, meanwhile the driver power on.

### Match code with EX series panel:

- A. Single zone panel: Long press ON/OFF key until all indicator flicking.

  Multi-zone panel: Long press ON/OFF key until all zone's indicator flicking.
- B. The driver power on, the lamps flicker slowly, please complete step c within 15s.
- C. Single zone panel: Press any key on panel.

  Multi-zone panel: Press the matching zone key.
- \* Please match code when panel is power-on.

### Match code with gateway:

Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.

#### Step 3

The lamps of driver flicker quickly and then stop flicking, the buzzer long beep, match code successfully.

----

The lamps of driver flicker quickly and then stop flicking, the buzzer long beep, match code successfully.

Match code with other gateway, please operate according to APP's prompts.



#### Clear Code:

Clear Code (ID learning button method):

Long press "ID learning button" on driver for 10 seconds, If the lamps flicker 5 times, deactivate the matching successfully.



#### Clear Code (power on method):

Power on and off driver continuously for 10 times, if the lamps flicker 5 times, deactivate the matching successfully.



